


# ADJUSTABLE FLOOR CLEANOUT



Approval Date  
Customer Approval  
Job Location  
Job Name

**6000-X**  
**CAST IRON ADJUSTABLE FLOOR CLEANOUT WITH SATIN FINISH NICKEL BRONZE TOP ASSEMBLY, PLASTIC HOUSINGS, HEAVY DUTY VANDAL PROOF SECURED COVER AND BOTTOM OUTLET.**  
**INSTALLATION INSTRUCTIONS**

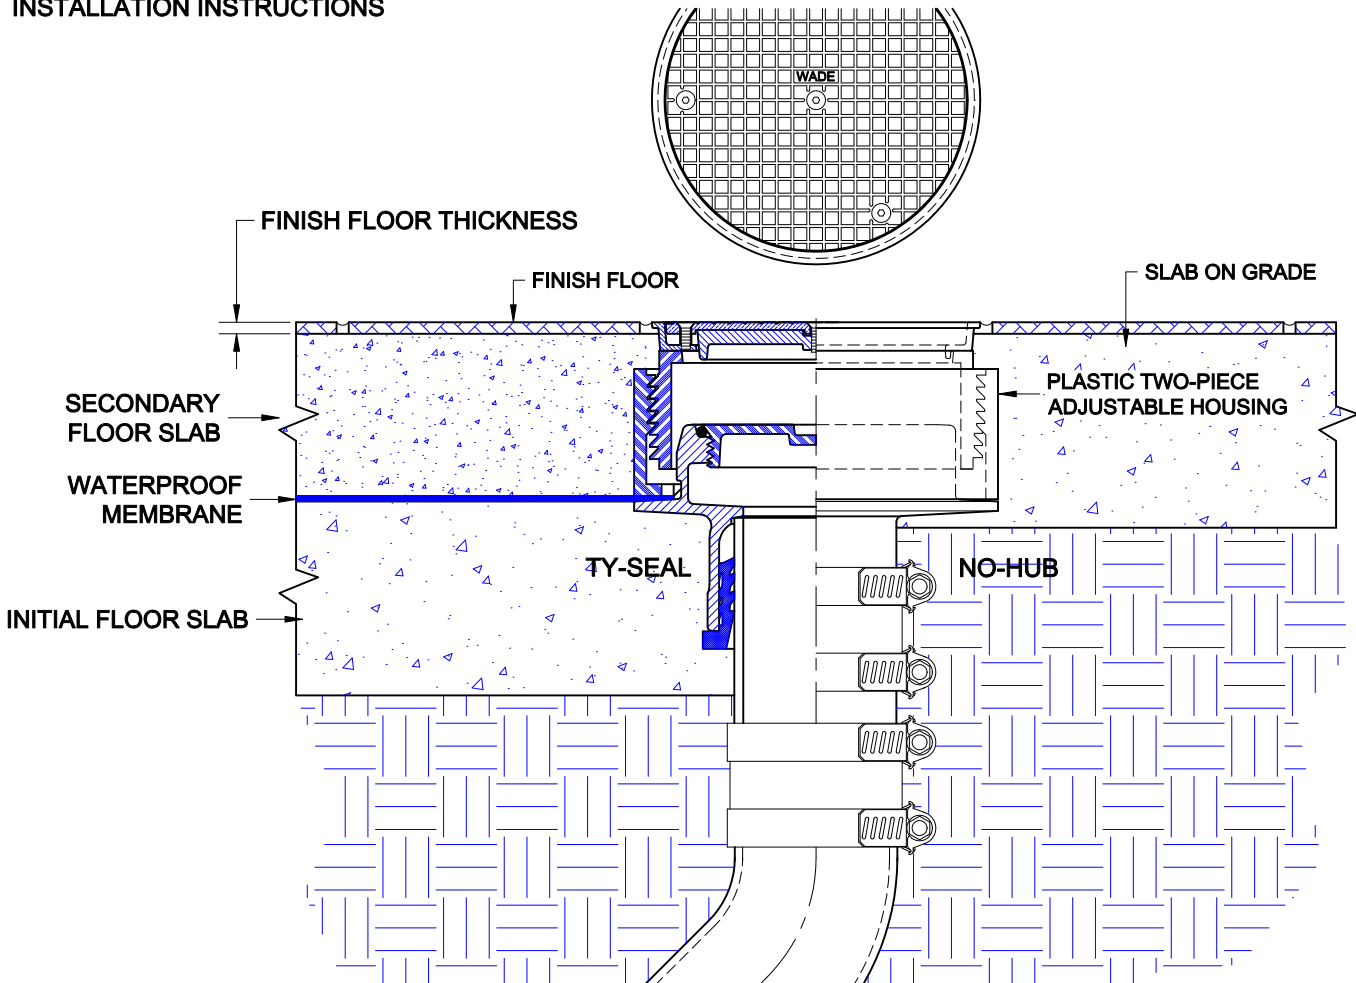

The Wade 6000-X adjustable floor cleanout is for most floor constructions. The drain piping is first run to an elevation below the expected finish floor level. The body ( ferrule ) is secured to the pipe with with any of three connections; No-Hub, Inside Caulk, or Push-On Ty-Seal. The type of connection must be specified upon ordering most Wade cleanouts. If the Ty-Seal connection is specified, apply Tyler Ty-Seal lubricant to the inside surfaces of the gasket and then firmly push the cleanout ferrule onto the pipe until it contacts the pipe stop in the body. No-Hub outlets should be installed with Tyler or Anaco/Husky couplings and secured with a torque wrench to the manufacturers recommendations. Inside Caulk connections should follow standard industry practices.

Once the ferrule is connected to the pipe, the initial concrete sub-floor is poured to an elevation level with the flange of the ferrule. The waterproofing membrane is applied to the the sub-floor surface, covering the ferrule flange and up to the perimeter of the body. The top assembly is aligned over the ferrule - make sure the plastic tabs match the beveled areas on the ferrule. Firmly push the top down until it contacts the membrane at the ferrule flange.

For slab on grade construction, install the top assembly onto ferrule, adjust to the desired level and pour concrete up to and around the perimeter of the top. If a finish floor material is to be used, the top should extend abof the structural slab the dimension of the finished floor thickness.

The adjustable top assembly threads up or down to the desired dimension. The cleanout top should be at the finish floor level or slightly below. Note that the top assembly should be above the structural slab to accomodate the finish floor material. Care must be taken to protect the top during installation. A plastic cover is provided and should remain in place until after the installation of the finish floor is complete. If the plastic protector is lost, use either cardboard, tape or other protective materials.